

3.1.1 TECHNICAL DATA

MAX OPERATING PRESSURE (PS): 360 bar

PRESSURE TEST (PT): 1.43 x PS

NOMINAL CAPACITIES:

0.2 - 0.7 - 1 - 1.5 - 3 - 5 - 10 - 15 - 20 - 25 - 35 - 55 litres

WORKING TEMPERATURE: -40 ÷ +150 °C

COMPRESSION RATIO (Po : P2): max. 1 : 4

FLUID VISCOSITY RANGE: 10 ÷ 400 cSt

RECOMMENDED VISCOSITY: 36 cSt

FLUID CONTAMINATION DEGREE:

class 21/19/16 according to ISO 4406/99

BODY MATERIAL:

- carbon steel shell painted with rust inhibitor RAL 8012
- nickel coating 25 - 40 µ
- stainless steel AISI 316L
- internal and external coating with RILSAN th. 0.6 mm

VALVES MATERIAL:

- phosphated or galvanized carbon steel in compliance with Directive 2002/95/EC (RoHS) to resist to corrosion
- stainless steel AISI 316L
- nickel coating 25-40 µ

BLADDER MATERIAL:

- P = Nitrile rubber (NBR)
- F = Low temp. nitrile rubber
- H = Nitrile for hydrocarbons
- K = Hydrogenated nitrile (HNBR)
- B = Butyl (IIR)
- E = Ethylene-propylene (EPDM)
- N = Chloroprene (Neoprene)
- Y = Epichlorohydrin (ECO)
- V = Fluorocarbon (FPM)

See Table 3.1c and/or Chapter 1.5


FILLING VALVE CONNECTION:

- 5/8" UNF std
- 7/8" UNF
- 1/4" BSP

FLUID PORT CONNECTION: see 3.1d


FLOW RATE: see Table 3.1e

WEIGHT: see Table 3.1e

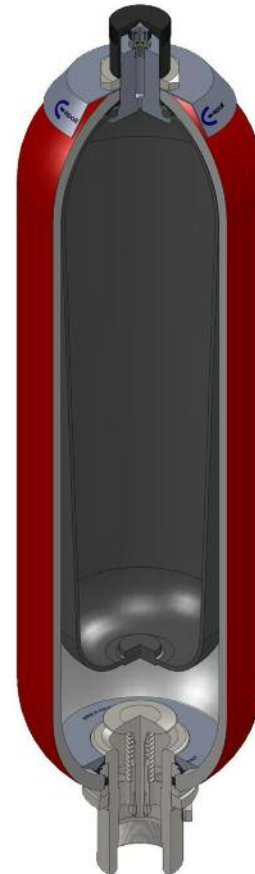

3.1a

3.1.2 HYDRAULIC SYMBOL

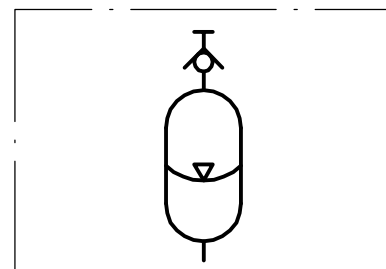

3.1b

3.1.3 “AS and ASP” BLADDER ADVANTAGES

- dirt tolerant
- light weight
- compact
- simple construction
- quick response
- works well on water, low lubricity fluids
- quick, easy installation
- low cost

3.1.4 DESCRIPTION

Bladder-type accumulators consist of a seamless cylindrical pressure vessel made of high-tensile steel.

The accumulator is subdivided into a gas and fluid side by an elastic bladder mounted in the interior of the vessel.

The bladder is charged with nitrogen to the specified gas charge pressure P0 by means of gas valve.

When the fluid is pressed into the accumulator, the gas in the bladder is compressed and hence the pressure increased.

The gas volume reduces and on the fluid side, the fluid can flow into the accumulator. As soon as the pressure on the fluid side falls below the gas pressure, the accumulator is emptied.

Oil valve is provided in the oil port of the bladder-type accumulator and closes when the pressure on the gas side is higher than the one on the fluid side.

This prevents draining of the bladder into the oil channel and thus the bladder from being destroyed.

When the minimum operating pressure is reached, a small oil volume is to be maintained between the bladder and the fluid volume (approx. 10% of the nominal capacity of the hydraulic accumulator), in order that the bladder does not hit the valve during every expansion process.

Gas valve consists of external caps, sealing cap, filling valve, gas valve body and rubber coated washer. These parts can be replaced separately. The nameplate shows the technical data and features of the hydraulic accumulator.

3.1.5 EUROPE MARKET

All hydraulic accumulators are pressure vessels and are subject to the national regulations and directives valid at the place of installation. Bladder accumulator type AS, up to and including 1 litre, must not be CE marked.

Bladder accumulator type ASP, up to and including 1 litre and max. pressure less than 200 bar, must not be CE marked.

For bladder accumulator type AS, greater than 1 litre and, in the case of ASP, greater than 1 litre but with max. Pressure higher than 200 bar every shipping batch is complete of a conformity declaration and instruction of use and maintenance and/or all documents requested.

All vessel categories (see Table 3.1e) must be protected by means of a pressure relief valve in accordance with Directive 97/23/EC.

3.1.6 ACCESSORIES

For support equipment, see Cap. 7

For gas side's safety equipment, see Cap. 8

For fluid side's safety equipment, see Cap. 9

For pre-loading and charging set, see Cap. 11

For other components, see Cap. 12

3.1.7 BLADDER-TEMPERATURE-LIQUID COMPATIBILITY

When selecting the accumulator variant, pay attention to the following non-binding notes with regard to hydraulic fluid, bladder material and the permissive temperature range. (see Section 1.5)

Code letter	Polymer	ISO	Temperature range (°C)	Some of the liquids compatible with the polymer
P	Standard nitrile (Perburan)	NBR	-20 ÷ +80	Aliphatic hydrocarbons (propane, butane, gasoline, oils, mineral greases, diesel fuel, fuel oil, kerosene), mineral greases and oils, HFA - HFB - HFC fluids, many dilute acids, alkalis, saline solutions, water, water glycol.
F	Low temperature nitrile	NBR	-40 ÷ +70	The same as with standard nitrile + a number of different types of Freon. (This contains less acrylonitrile than the standard and is therefore more suitable for low temperatures, but its chemical resistance is slightly lower).
H	Nitrile for hydrocarbons	NBR	-10 ÷ +90	Regular and premium grade slightly aromatic gasoline (and all the liquids for standard nitrile).
K	Hydrogenated nitrile	HNBR	-30 ÷ +130	The same as with standard nitrile but with excellent performance at high and low temperatures.
B	Butyl	IIR	-30 ÷ +100	Hot water up to 100°C, glycol-based brake fluids, many acids and bases, salt solutions, polar solvents such as alcohols, ketones and esters, polyglycol-based hydraulic fluids (HFC fluids) and bases of esters of phosphoric acid (HFD-R fluids), silicone oils and greases, Skydol 500 and 7000, resistance to ozone, aging and weathering.
E	Ethylene-Propylene	EPDM	-30 ÷ +100	Hot water up to 100°C, glycol-based brake fluids, many organic and inorganic acids, detergents, solutions of sodium and potassium, phosphate ester-based hydraulic fluids, (HFD-R), silicone oils and greases, many polar solvents (alcohol, ketones, esters), Skydol 500 and 7000, resistance to ozone, aging and weathering.
N	Chloroprene (Neoprene)	CR	-30 ÷ +100	Mineral oils of paraffin, silicone oils and greases, water and aqueous solutions, refrigerants (ammonia, carbon dioxide, Freon), naphthenic mineral oils, low molecular aliphatic hydrocarbons (propane, butane, fuel), brake fluids based on glycol, better resistance to ozone, weathering and aging compared to NBR rubber.
Y	Epichloridrin	ECO	-30 ÷ +110	Mineral oils and greases, aliphatic hydrocarbons (propane, butane and gasoline), silicone oils and greases, water at room temperature, resistance to ozone, aging and weathering.
V	Fluorocarbon	FPM	-10 ÷ +150	Mineral oils and greases, non-flammable fluids of HFD group, silicone oils and greases, animal and vegetable oils and greases, aliphatic hydrocarbons (gasoline, butane, propane, natural gas), aromatics hydrocarbons (benzene, toluene), chlorinated hydrocarbons (Tetrachloroethylene, carbon tetrachloride), fuel (regular, super and containing methanol), excellent resistance to ozone, weathering and aging.

For other hydraulic fluid and/or temperatures, please consult us.

3.1c

3.1.8 ORDER CODE

AS	25	P	360	C	R	G4	V	-	8	-	C	0	C	0	R250	/	30
----	----	---	-----	---	---	----	---	---	---	---	---	---	---	---	------	---	----

1 • Series	
Bladder accumulator	= AS
Bladder accumulator for fluid gr. 1 (dangerous)	= ASP

2 • Nominal capacity (litres)	
Fig. 1	= 0.2
Fig. 2	= 0.7
Fig. 2	= 1
Fig. 2	= 1.5
Fig. 2	= 3
Fig. 2	= 5
Fig. 2	= 10
Fig. 2	= 15
Fig. 2	= 20
Fig. 2	= 25
Fig. 2	= 35
Fig. 2	= 55

3 • Bladder material	
Nitrile rubber (NBR)	= P
Nitrile for low temp.	= F
Nitril for hydrocarbons	= H
Hydrogenated nitrile (HNBR)	= K
Butyl (IIR)	= B
Ethylene-propylene (EPDM)	= E
Chloroprene (Neoprene)	= N
Epichlorohydrin (ECO)	= Y
Fluorocarbon (FPM)	= V

4 • Max working pressure (PS)	
See the table on front page	

5 • Body material	
Carbon steel	= C
Nickel coated carbon steel 25 µ	= N
Nickel coated carbon steel 40 µ	= M
Stainless steel	= X
Rilsan coating	= V

6 • Fluid port connection	
See the table on front page	

7 • Dimension of the connection fluid or 7+8 table	
See the table on front page	

16 • Precharge pressure (bar)	
Standard 30 bar = 0 ÷ 300 (< PS)	

15 • Other variants	
See the table on front page	

14 • Variants of gas side	
Standard	= 0
Only cap in stainless steel	= 1
Brass nameplate	= 2
Other numbers/variants to be requested EPE	

13 • Gas valve material	
Carbon steel	= C
Nickel coated carbon steel 25 µ	= N
Nickel coated carbon steel 40 µ	= M
Stainless steel	= X

12 • Variants of fluid side	
Standard	= 0
Adapter in stainless steel (R)	= 1
Button and spring in stainless steel	= 2
Other numbers/variants to be requested EPE	

11 • Fluid valve material	
Carbon steel	= C
Nickel coated carbon steel 25 µ	= N
Nickel coated carbon steel 40 µ	= M
Stainless steel	= X

10 • Test and certification	
Factory testing	= 0
GOST-R (Russia)	= 1
Australian Standard	= 2
ML (China)	= 3
RINA	= 4
PED97/23/EC(for capacities greater than 1 l)	= 8
ATEX 94/9EC	= 9
DNV	= 10
RTN Passport (Ukraine)	= 11
Algeria passport	= 12

9 • Type of filling valve	
Standard filling valve 5/8" UNF thread = V	
Standard filling valve with 5/8" UNF thread in stainless steel = VX	
Without filling valve (thread hole M12x1.5) = V0	
Brass filling valve 1/4" BSP = V2	
Filling valve 7/8" UNF = V4	

Special variants on request

4 • Max working pressure (PS)		
Capacity litres	Carbon steel	Stainless steel
0,2 ÷ 3	360 (100 only for ASP type)	150 - 210 - 360
5 ÷ 55	360 (100 only for ASP type: 210 only for the version with connection L or other pressure related to connections B or U)	80 - 150 - 210 -360

6 • Fluid port connection		
For AS0.7÷55	BSP ISO 228 with chamfer for OR (std)	= A
For AS0.2	BSP ISO 228 (std)	= G
For AS3÷55	Metric	= M
For AS0.7÷55	NPT-F	= P
For AS3÷55	internal thread SAE	= S
For AS3÷55	adapter for flange SAE 3000 Psi	= L
For AS3÷55	adapter for flange SAE 6000 Psi	= H
For AS0.7÷55	flange ANSI	= B
For AS0.7÷55	flange UNI	= U
For AS0.7÷55	square flange	= Q
For AS0.7÷55	adapter *	= R

* assembled on the fluid valve connection type A

7 • Dimension of the connection fluid	
For the type of connection:	
A (0.7÷1.5 l) 3/4"	= 5
(3÷5 l) 1" 1/4"	= 7
(10÷55 l) 2"	= 9
G (0.2 l) 1/2"	= 4
M (3÷5 l) 40x1.5	= 40/1.5
(10÷55 l) 50x1.5	= 50/1.5
P (0.7÷1.5 l) 3/4"	= 5
(3÷5 l) 1" 1/4"	= 7
(10÷55 l) 2"	= 9
S (0.7÷1.5 l) 1" 1/16 12UN	= 1 1/16-12
(3÷5 l) 1" 5/8 12UN	= 1 5/8-12
(10÷55 l) 1" 7/8 12UN	= 1 7/8-12
L (3÷5 l) 1" 1/4 SAE3000	= 7
(10÷55 l) 1" 1/2 SAE 3000	= 8
2" SAE 3000	= 9
H (3÷5 l) 1" 1/4 SAE6000	= 7
(10÷55 l) 1" 1/2 SAE 6000	= 8
2" SAE 6000	= 9
B (0.7÷55 l)	DIMENSION/RATING
Former. 1" ANSI 1500 = 1/1500 (Pmax = 250 bar)	
U (0.7÷55 l)	DN/PN
Former. DN50 PN100 = 50/100 (Pmax = 100 bar)	
Q (3÷5 l) 1" 1/4"	= 7
(10÷55 l) 2"	= 9
R (0.7÷55 l) Blind	= 0
R (0.7÷55 l) internal thread	
BSP ISO 228	= G*
NPT-F	= P*
BSPT	= N*
SAE	= S*
Metric	= M*

15 • Other variants	
Adapter + rupture disc set at xxx bar (see Section 8.2)	= Rxxx
Adapter + Safety valve, type VS224/TX set at xxx bar	= Sxxx
Adapter + Needle Valve of 1/4" BSP	= EG2
Adapter + Stainless steel needle Valve of 1/4" BSP	= EG2X
Adapter + excluding device with with full scale pressure gauge of xxx bar	= EMxxx
Adapter + excluding device of 90° with full scale pressure gauge of xxx bar	= ELMxxx
Flushing with degree of contamination ≤ x	= Fx
75-80 μ thick polyurethane paint with colour to be specified	= W
Off-shore paint with colour to be specified	= Z
NORSOK System 1 paint with colour to be specified	= K1
NORSOK System 7 paint with colour to be specified	= K7
other variants upon request	

8 • Dimension	
1/8"	= 1
1/4"	= 2
3/8"	= 3
1/2"	= 4
3/4"	= 5
1"	= 6
1" 1/4"	= 7
1" 1/2"	= 8


Dimension in inch - No.of pitch for inch

Diameter/pitch

*Variant in table 8

Special variants upon request

3.1.9 DIMENSIONS

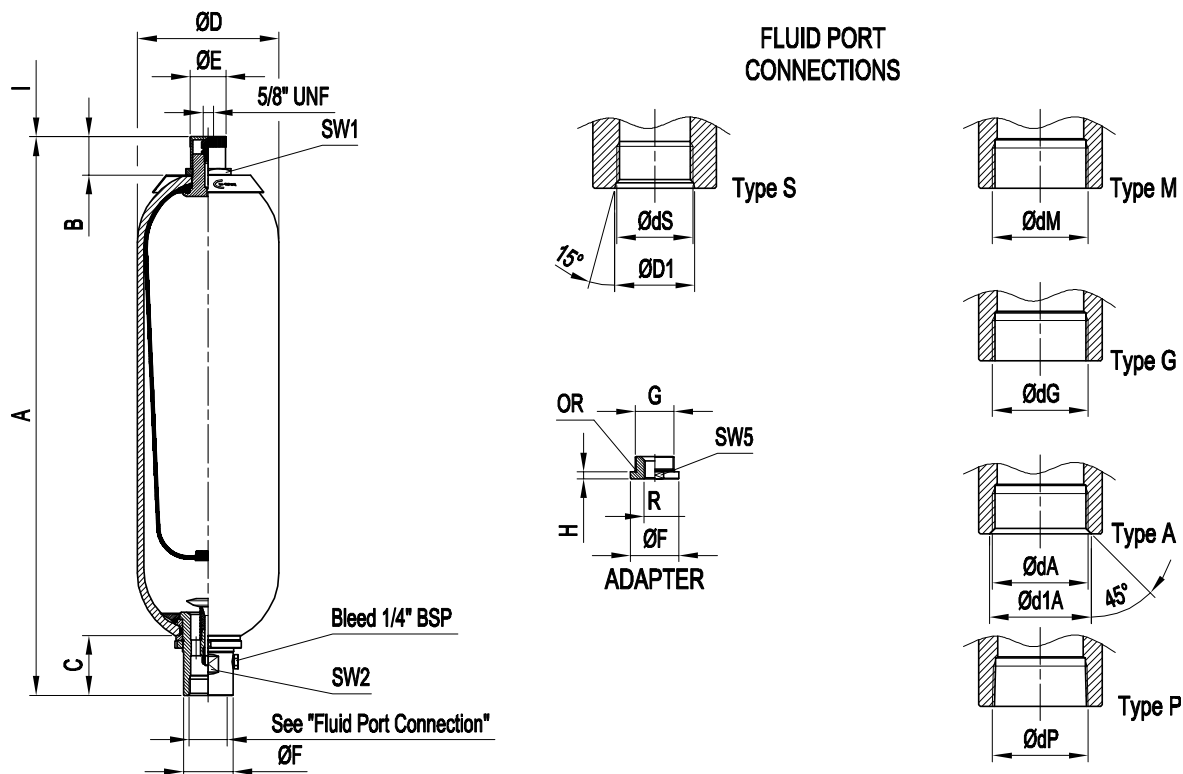

3.1d

Accumulator type AS-ASP in carbon steel	Nominal gas volume litres	Effective gas volume litres	Working pressure bar	Ped category for the liquids of group 2	Maximum differential pressure bar	Flow rate l/min	Maximum compression ratio P0/P2	A mm	B mm	C mm	$\varnothing D$ mm	$\varnothing E$ mm	$\varnothing F$ mm	I mm	SW 1 mm	SW 2 mm	Dry weight kg
AS0,2 ASP0,2	0,2	0,2	360	Art.3 (3) III	100	160	1:4	250 ± 2	22	40	53 ± 0,1	20	26	140	24	23	1,7
AS0,7 ASP0,7	0,7	0,65	360	Art.3 (3) III	100	300	1:4	280 ± 1,5	47	52	90 ± 0,5	25	36	140	32	32	4,2
AS1 ASP1	1	1	360	Art.3 (3) III	100	300	1:4	295 ± 15	47	52	117 ± 1	25	36	140	32	32	5,2
AS1,5 ASP1,5	1,5	1,5	360	II III	100	300	1:4	355 ± 5	47	52	114 ± 1	25	36	140	32	32	6,3
AS3 ASP3	3	2,95	360	III IV	100	600	1:4	553 ± 8	47	65	114 ± 1	25	53	140	32	50	11
AS5 ASP5	5	5	360	III IV	100	600	1:4	458 ± 10	47	65	168 ± 1,5	25	53	140	32	50	15
AS10 ASP10	10	9,1	360	IV	100	1000	1:4	568 ± 10	60	101	220 ± 2	60	77	140	70	70	33
AS15 ASP15	15	14,5	360	IV	100	1000	1:4	715 ± 10	60	101	220 ± 2	60	77	140	70	70	43
AS20 ASP20	20	18,2	360	IV	100	1000	1:4	873 ± 10	60	101	220 ± 2	60	77	140	70	70	48
AS25 ASP25	25	23,5	360	IV	100	1000	1:4	1043 ± 15	60	101	220 ± 2	60	77	140	70	70	59
AS35 ASP35	35	33,5	360	IV	100	1000	1:4	1392 ± 15	60	101	220 ± 2	60	77	140	70	70	78
AS55 ASP55	55	50	360	IV	100	1000	1:4	1910 ± 15	60	101	220 ± 2	60	77	140	70	70	108

3.1e

* The maximum differential pressure is the maximum allowable difference between the maximum pressure and the minimum working pressure ($P_2 - P_1$) to have an infinite life cycle of the accumulator (greater than 2,000,000 cycles).

** Flow rate measured using mineral oil with viscosity of 36 cSt at 50°C and $\Delta P = 5$ bar

3.1.10 SPARE PARTS CODE

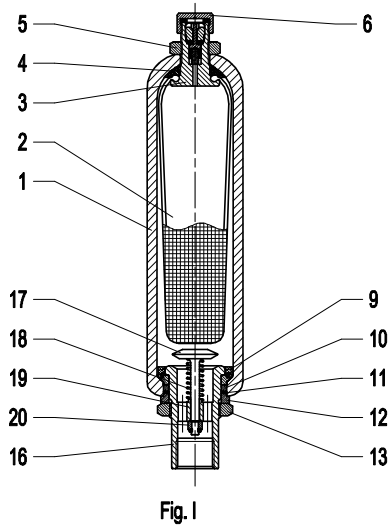


Fig. I

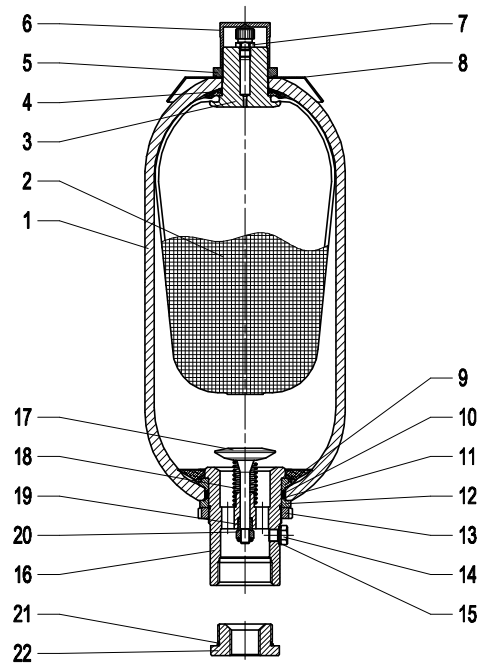


Fig. II

3.1f

Item	Description	Pcs.	Models					
			AS 0,2 ASP 0,2	AS 0,7 ASP 0,7	AS 1 - 1,5 ASP 1 - 1,5	AS 3 ASP 3	AS 5 ASP 5	AS 10-15-20-25-35-55 ASP 10-15-20-25-35-55
1	Accumulator shell	1	Not supplied as spare part					
2	Bladder	1	10092	10191	10189-10192	10193	10289	10390
3	Gas valve body	1	2001	10107			10202	10333
4	Rubber-coated washer	1	10024	10104	10106		10205	10334
5	Gas valve locknut	1	10023	10109				10302
6	Protection cap	1	10337	10103				10301
7	Gas-fill valve	1	2072					
8	Name plate	1	-	10300-A	10300-B		10300-C	10300-D
9	Retaining ring	1	10035	10123	10127	10146	10222	10317
10	"O" ring	1	OR4112	OR4150		OR159	OR6212	OR181
11	Supporting ring	1	10038	10133		10150	10227	10320
12	Space ring	1	10037	10120		10223		10319
13	Fluid port ring nut	1	10039	10122		10217		10321
14	Bleed screw	1	-	10128				10316-A
15	Seal ring	1	-	10129				10336-A
16	Fluid port body	1	10031	10115		10144		10311
17	Poppet	1	10028	10111		10221		10310
18	Spring	1	10029	10112		10149		10322
19	Brake bushing	1	-	10113		10226		10314
20	Selflocking nut	1	10033	10116		10211		10315
21	Adapter "O" ring	1	-	OR2093		OR3150		OR3218
22	Adapter	1	-	10131/Ø thread code		10233/Ø thread code		10323/Ø thread code
Gas valve assembly (parts 3-4-5-6-7)		1	2002-**	2021-**	2022-**		2042-**	2062-**
Fluid port assembly (parts 9 ÷ 20)		1	2004-**	2023-**	2024-**	2025-**	2044-**	2064-**
Gasket sets		1	2010-* { OR2050 10341 10342 OR4112 10038 }	2030-* { OR2050 10341 10342 OR4150 10133 10129 OR2093 }	2031-* { OR2050 10341 10342 OR159 10149 10129 OR3150 }	2050-* { OR2050 10341 10342 OR6212 10227 10129 OR3150 }	2080-* { OR2050 10341 10342 OR181 10320 10336 OR3218 }	

3.1g

3.1.11 COMMISSIONING AND MAINTENANCE

Delivery conditions

Bladder accumulators are delivered pre-charged with nitrogen at a pressure of 30 bar or at value of pressure required at time of order. The pre-charge value is also on the nameplate of the accumulator.

Depending on the size and quantity ordered, the bladder accumulators are shipped in boxes, in cartons, on pallets or wooden boxes on request. Unless otherwise required, certificates and documentation are provided together with the accumulators.

Handling

The original packaging is suitable for handling and storage. Where necessary, you should use suitable lifting equipment to support the weight of the accumulators.

However protect from impact the packaging and handle it with care.

Storage

During storage in the warehouse, leave the product in its original packaging, keeping it away from heat sources and naked flames. The storage temperature should be between +10 and +40°C.

After six years of storage, it is essential to proceed with the replacement of all elastomeric parts before the commissioning.

Marking on the nameplate of the accumulator

With reference to the PED 97/23/EC classification, Article 3, Paragraph 3 and / or risk categories I or II depending to the volume and maximum working pressure, the accumulator indicates the following data:

- Logo, name and country of the manufacturer
- Month/year of production
- Product code
- Serial number
- Maximum PS pressure and PT test pressure in bar
- Min. and max. TS working temperature in Celsius
- Volume V in litres
- Group of fluids allowed (II)
- CE marking (for volumes exceeding 1 litre) with the identification number of the notified body
- Pre-charge pressure in bar

It is strictly forbidden to:

- weld, rivet or screw any item of the accumulator
- engrave or permanently stamp the surfaces of the accumulator shell and / or carry out other operations that could affect or change the mechanical properties of the accumulator
- use the accumulator as a structural element: it should not be subjected to stresses or loads
- change the data of the nameplate and / or accumulator without the permission of the manufacturer
- use a (dangerous) fluid of Group 1 with equipment designed and manufactured for fluids of Group 2.

Installation

Before installation, you must perform a visual check to verify that the accumulator has not suffered any damage during shipping / handling. Verify that the requested type matches with what stamped on the nameplate.

We recommend using the accumulator with a suitable security valve (see

Chapter 8) or a security block type BS (see Chapter 9). This device provides user and equipment protection against possible damage caused by pressure surges and also makes the maintenance of the accumulator easier, facilitating the interception and the discharge.

Provide for a space of 200 mm above the gas pre-charge valve to allow access to and control of the pre-charge equipment (see Chap.11.1).

The accumulators type AS may be installed in any position from horizontal to vertical (preferably with the pre-charge valve at the top), and the nameplate must be visible.

Proceed to the assembly so that no abnormal force affects the pipes connected directly or indirectly to the accumulator, so we recommend the use of supporting components and also fastening (please see Chapter 7) to avoid the transmission of vibrations.

If are not used EPE safety blocks, make sure that the accumulator is connected to the hydraulic circuit by suitable connection devices.

Make sure the fluid is compatible with the elastomer of the bladder.

Check that the max. allowed accumulator pressure is equal to or greater than that of the hydraulic circuit and that the temperature during operation is maintained within the range expected.

Make sure the fluid does not contain contaminants and/or abrasive.

Pre-charge of nitrogen

Normally, the bladder accumulators are delivered pre-charged with pressurized gas. The pre-charge of gas can be controlled and / or adjusted before or after installation of the accumulator in the hydraulic circuit.

For the pre-charge, use only industrial dry nitrogen with a purity of min. 99%. It is important to use the nitrogen from a bottle equipped with a pressure reducing valve (see Chap.11.3). Use the EPE pre-charge and charging set type PC to check the charging pressure requires, and adjust if necessary. If the pre-charge pressure is lower than required, connect the charging hose on one side and the other side connect it to the nitrogen bottle or to the pressure reducer. Slowly fill the nitrogen in the accumulator until reaching a pressure slightly higher than that set value (+ 10 ÷ 15%). Close the bottle and remove the charging hose pipe from the pre-loading set; wait until the gas temperature has stabilized (2 hours) and calibrate the pressure, discharging the excess gas.

Make sure that the gas valve is not subject to losses and, if necessary, use soap and water.

Tighten the protective caps manually.

Hydraulic pressurization

- Check that the pre-charge pressure is adequate for the application.
- Ensure that the hydraulic pressure never exceeds the max allowed pressure (PS) shown on the accumulator shell.
To avoid this risk, use a safety item (see Chap. 9).

Maintenance

- Periodically check the pre-charge pressure of the gas: after the commissioning, check after 2-3 weeks of operation and if there were no leaks, repeat the operation after 3 months; if the pressure at the same temperature was stable, repeat the test yearly. For heavy-duty applications, check the pre-charge every 6 months.
- Periodically (yearly) carry out a visual inspection of the accumulator in order to detect any early signs of deterioration such as corrosion, deformation, etc.
- Comply with the requirements of the regulations concerning the verification of the functionality of the equipment according to the country of installation of the accumulator.

Repair

If for failure, scheduled check or retest it is necessary to remove the accumulator from the system, prior to removal, isolate the accumulator from the installation and discharge pressure of the liquid.

All bladder EPE accumulators of the AS and ASP series may be repaired. It may consist in replacing the bladder, the seals, the pre-charge valve and/or the parts of the gas and fluid valve.

For reasons of functionality and security, it is recommended to use only original spare parts.

Disassembly

- Fasten the accumulator firmly in a vice or on a bench in a horizontal position, taking care not to damage the outer surface.



3.1k

- Undo slotted round nut for hook wrench by using the hook wrench.



3.1h

- If you have not already carried out, unscrew the cap nut first and then the valve cap of the gas valve.




3.1i

- Remove the slotted nut and the retaining ring.



3.1i

- Allow gas escapes from the bladder with the help of the check valve until a pressure of 0 is displayed. Check if the bladder is now de-pressurizing an open valve.

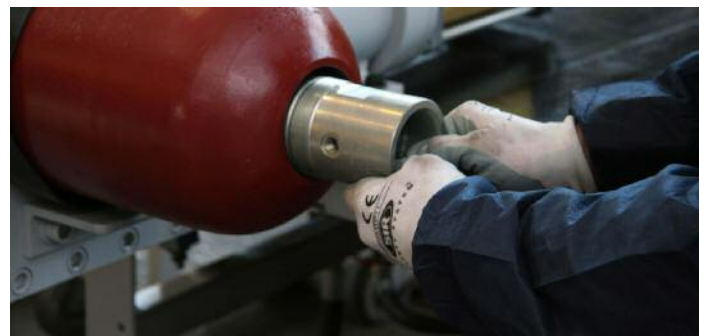

3.1m

- Push enough oil valve into the housing until the sealing ring and the washer can be removed.



3.1j

- Remove gas valve, unscrew the nut on the gas valve and remove the nameplate.



3.1n

- Remove the sealing ring and the washer.



3.1o

- Remove the retaining ring, take it out, by carefully pushing the ring together.



3.1p

- Remove the oil valve from the shell.



3.1q

- Fold bladder somewhat and withdraw by turning it slightly.

If the pre-charge pressure is lower than required, connect the inflation tube on one side and the other of the equipment. Connect it to the cylinder of nitrogen or to the pressure reducer.

Slowly enter the nitrogen in the accumulator until reaching a pressure slightly higher than that set (+ 10 ÷ 15%).

Close the cylinder and remove the connecting pipe from the equipment; wait until the gas temperature has stabilized (2 hours) and calibrate the pressure, discharging the excess gas.

Make sure that the gas pipe is not subject to losses and, if necessary, use soap and water.

Tighten the protective cap manually.

Refitting

Tightening torques in Nm				
	0.2 l	0.7-1.5 l	3 - 5 l	10-55 l
Fluid port ring nut	60 +10	100 +20	200 +50	450 +50
Bleed screw	3 +1	5 +1	5 +1	30 +10
Gas valve locknut	50 +10	80 +20	100 +20	150 +30
Filling valve V - VX - V2	-	30 +5	30 +5	30 +5
Valve insert V4	-	0.3 +0,2	0.3 +0.2	0.3 +0.2

- Cleaning and testing: clean all metallic parts on accumulator using an organic degreaser - visual inspection of oil valve parts (valve poppet, spring, nut, break bushing) - check valve for sluggishness - Clean bladder, i.e. using isopropanol. Visual inspection of bladder for faults - inner inspection of shell for signs of corrosion. In event of coated shell, check the condition of the coating. Replace the parts deemed to be bad; the o-rings must always be replaced (see spare parts Section 3.1.10).



3.1s

- Drain air from bladder by pressing together.



3.1t

- Carefully moisten the inside of the bladder and the shell with the same medium operation. That will be used during operation.



3.1u

- Reinstall according to this sequence: o-ring, support ring and space ring.



3.1v

- Screw the slotted nut and centre the parts on the oil valve by using a plastic hammer.



3.1z

- Mount the filling valve.



3.1w

- Bleed screw with sealing ring.



3.1x

- Mount the bleed screw with its sealing ring.



3.1y

- Tighten the hexagon nut SW1 on the gas valve.

Pre-charge



3.1zz

- Screw the pre-charge PC equipment on the gas valve.
- Connect the equipment to the cylinder of nitrogen or to the pressure reducer with the inflation tube.
- Slowly enter the nitrogen in the accumulator until reaching a pressure slightly higher than the set value (+ 10 ÷ 15%).
- Close the cylinder and remove the connecting pipe from the equipment.
- Wait until the gas temperature has stabilized (2 hours).
- Calibrate the pressure discharging the excess gas.

Make sure that the gas valve is not subject to losses and, if necessary, use soap and water.

Tighten the protective caps manually.

Demolition and recycling of the accumulator

Before accumulator demolition or recycling, you should always discharge completely the pre-charge pressure and remove the gas valve.

If needed, proceed decontaminating in relation to the fluid used prior to demolition.


3.1.12 REPAIR TOOLS

3.1.12.1 BLADDER PULL ROD

The pull rod screwed to the gas valve of the bladder for easy assembly into shell during reassembly. Pull rod is complete with fitting for EPE gas valve and 3 extension segments to accommodate all size of accumulators.

Code for complete kit: **B2505**

Dimension

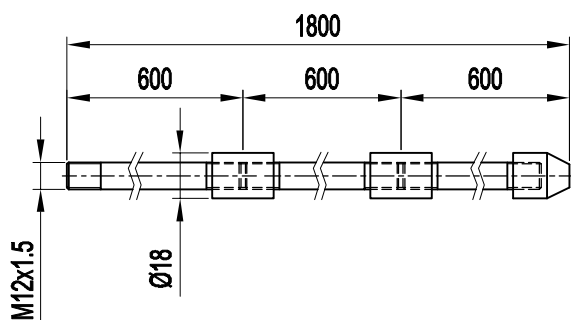

3.1aa

3.1.12.3 LIFTING HOOK


To be used for the safe lifting of mounted accumulators:

For accumulators 0,7÷5 lt (M22x1,5) code **B2507/2**

For accumulators 10÷55 lt (M50x1,5) code **B2507/5**

For accumulators V4 (7/8" UNF) code **B2507/7**

Dimension

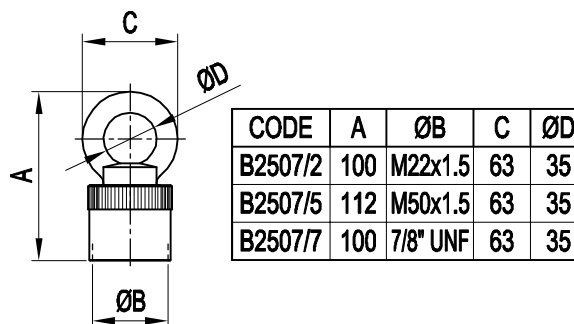

3.1ac

3.1.12.2 SPANNER WRENCH


Fits all standard size bladder accumulator. It is used to remove or install lock nut on fluid port assembly.

0,7÷1,5 lt code **2506/58**

3÷5 lt code **2506/68**

10÷55 lt code **2506/105**

Dimension

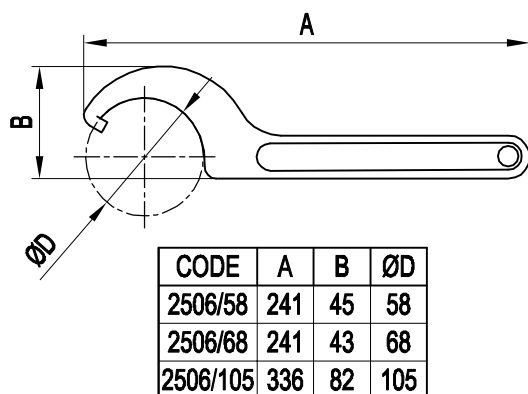


3.1ab

3.1.12.4 CORE TOOL

The core tool is used to remove and reinstall the valve core type V4.

Code **B2508**

Dimension

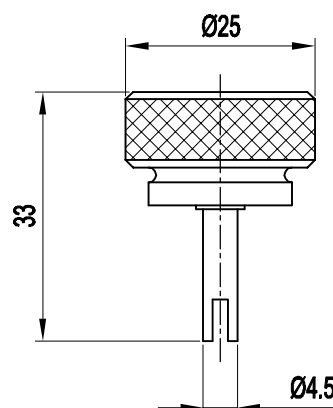

3.1ad

Reproduction is forbidden.

In the spirit of continuous improvement, our products may be changed.